



# DOUBLE SIT-STAND

## User Guide

SKU #: 5CSD-DSSBE-SV

### GETTING STARTED

1. Press the **S** button for 3 seconds. The LCD screen will display **5--** and start blinking.
2. Press the **S** key again to enter setup mode. Use the ▲ and ▼ buttons to toggle through the functions on LCD screen:
  - Un* To change the unit of height measurement
  - br* To change the LCD brightness
  - bEE* To turn beep notification on or off
  - CF* To turn collision protection on or off
  - SH* To set height
  - rF* To reset WiFi module
3. Press the **S** key to confirm the operation, or press **1** to exit setup mode.

### TO RESET THE BASE

If LCD displays an error code like *E10*, *E20*, *E60*, etc, press the ▲ button and **S** button simultaneously for 3 seconds. The base will do a self-check and fix any issues. Your base has been reset.

### SAVING A HEIGHT PRESET

1. Use the ▲ and ▼ buttons to move the height of your desk up and down.
2. Once you find the height you want to save, press the **S** button. The LCD screen will start blinking.
3. Then, press the **1**, **2**, **3**, or **4** button to save the current desk height to the corresponding number.

