



SINGLE SIT-STAND

User Guide

SKU #: 5CSD-SSBE-SV2 and 5CSD-SSBE2-SV2

SAVING A HEIGHT PRESET

1. Use the ▲ and ▼ buttons to move the height of your desk up and down.
2. Once you find the height you want to save, press the **M** button. The LCD screen will display 5-
3. Then press the **1**, **2**, or **3** button to save the current desk height to the corresponding number.

TO TROUBLESHOOT

1. If LCD displays an error code like **RSR**, **E01**, **E02**, etc, start by removing the power from the base and waiting 10 seconds.
2. After 10 seconds, plug the power back into the base.
3. Then, press the ▼ until your desk reaches the lowest height possible. This will reset your sit-stand base.

USING AUTOMATIC REMINDERS

1. Press the **A** key. The LCD screen will display **ON**
2. Use the ▲ and ▼ buttons to choose how many minutes you would like to set your reminder for.
3. Press any key to start the countdown.
4. Once your reminder beeps at the end of the countdown, press any key to start the countdown over again. To turn off reminders, hold down **A** for 3 seconds, until the LCD displays **OFF**.

