



SINGLE SIT-STAND

User Guide

SKU #: 5CSSBE2-DG

ACTIVATING THE DESK

1. Press the down arrow and hold for 10-15 seconds until it stutters or beeps.
2. Release the arrow. The desk is now ready to use.

RESETTING THE BASE

1. If LCD displays an error code like **RST**, **E1**, **E2** etc, unplug the power cord from the power source.
2. Wait 10 seconds, then plug the power cord back into the power source.
3. Press the down arrow and hold for 10-15 seconds until it stutters or beeps. The base has been reset.

COOLING THE MOTOR

1. If LCD displays the error code **HOT**, unplug the power cord from the power source to let the base cool off for a few minutes. Plug back in, then reset the base following the steps above.

SAVING A HEIGHT PRESET

1. Using the arrows, move the desk up and down to find the desired height.
2. Press the **M** button. The LCD display will show a flashing **5**-
3. Press one of the number keys (**1**, **2**, **3**, or **4**) to set the current desk height with the corresponding number.

LOCKING THE DESK

1. Press the up and down arrows at the same time to lock and unlock the desk's position.

